AUDIOLINE

Mobile Phone

Operating Instructions

M 4500

AUDIOLINE

M 4500

Contents

1	Safety Information	4
2	Preparing the Telephone	8
3	Operating Elements	16
4	Preliminary Information	23
5	Methods of Entering Data	29
6	Telephoning	31
7	Emergency Call Function	37
8	Phone Book	39
9	Call List	48
10	SMS - Text Messages	50
11	Mailbox	57
12	Services	59
13	Settings	64
14	Menu Structure	74
15	In Case of Problems	93
16	Technical Properties	97
17	SAR Information	103
18	Maintenance / Guarantee	105
19	Index	107

1 Safety Information

Please read this operating instruction manual thoroughly.

Risk of suffocation!
Keep packaging materials and protective foils out of reach of children.

Intended use

This mobile phone is designed for use when connected to a mobile phone network. Any other use is considered unintended use. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Areas of use

- Do **not** use the phone in prohibited areas.
- Switch the phone off in the vicinity of medical equipment (e.g. in hospitals).
- Do not use the phone in petrol stations or near fuels and chemicals.
- Inquire by the airline company whether mobile phones may be used before using the phone in aircraft.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

General information

- Prevent exposure to smoke, dust, vibration, chemicals, moisture, heat and direct sunlight. The phone is not waterproof; therefore, keep it dry.
- Only use original accessories and batteries. Never attempt to connect other products.
- If you want to connect the phone to another device, read the manual supplied with that device with regard to any detailed safety information. Never attempt to connect incompatible products.
- Repairs to this device may only be completed by qualified service personnel.
- All mobile communication equipment is subject to interference which may impair its performance.
- Keep the phone and accessories out of the reach of children.
- The SIM card can be removed. Caution! Small children can swallow them.
- The ringing tone is issued via the loudspeaker. Take an incoming call first and then hold the phone to your ear.
  This prevents any possible hearing damage.
- Only use the phone while driving or riding a transport vehicle in road traffic when using the approved handsfree equipment and appropriately positioned holders. Ensure that no safety-related functions are interfered with when operating the

phone. It is essential to observe the applicable laws and national regulations.

- Always maintain a distance of at least 15 cm to implanted heart pacemakers to prevent any possible interference. If you have had a pacemaker implanted, do not carry the phone in a breast pocket when switched on. Always hold the phone to the ear furthest away from the pacemaker during calls.
  Switch the phone off immediately if you notice or suspect any adverse effects.
- Do not rely on the mobile phone as a safeguard for emergencies. For a variety of technical reasons, it is not possible to guarantee a reliable connection under all circumstances.

Power adapter plug

⚠ **Attention:** Only use the power adapter plug supplied because other power supplies could damage the telephone. Ensure access to the power adapter plug is not obstructed by furniture or such.

Rechargeable batteries

⚠ **Attention:** Never throw batteries into a fire. Only use batteries of the same type.

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). The adjacent symbol indicates that the device must not be disposed of in normal domestic waste! According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old **electronic and electrical devices** in a separate waste container.

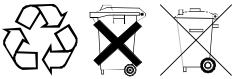

Batteries must be disposed of at the point of sale or at the appropriate collection points provided by the public waste authorities.

Packaging materials must be disposed of according to local regulations.

2 Preparing the Telephone

Safety information

> ⚠ **Attention:** It is essential to read the Safety Information in Chapter 1 before starting up.

Checking the package contents

The package contains:

1 mobile phone	1 charging unit
1 Li-ion battery	1 operating manual

Accessories

A desktop charging unit and leather belt pouch are optionally available as accessories. If you are interested in these accessories, please contact the sales outlet where you purchased the equipment or visit us in Internet at www.audioline.de.

In addition, you can purchase a commercially available headset (earphones) and vehicle charging cable as accessories for the device.

Barcode label in the phone

The barcode label contains information on the phone, such as the serial number, for example. Do not remove it.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Passwords

This mobile phone provides the option of using passwords. After activating the passwords, unauthorised third-parties cannot access the data stored on the phone. If the option is activated, access to certain functions, e.g. the phone book, is only possible after entering the correct password.

PIN* & PIN2 codes

The **PIN** and PIN2 codes are 4 to 8-digit numbers. The PIN and PIN2 codes are given to you, together with the SIM card, by your network provider.

PUK** & PUK2 codes

PUK and PUK2 codes are 4 to 8-digit numbers. These are only necessary if you enter the PIN code for the SIM card incorrectly three times in succession and the SIM card is blocked. The PUK and PUK2 codes are given to you, together with the SIM card, by your network provider.

Switching the mobile phone off and on

You can switch the mobile phone off to save the battery.

3 sec.	Switch the mobile phone off
3 sec.	Switch the mobile phone on

* **PIN** = **P**ersonal **I**dentity **N**umber

** **PUK** = **P**ersonal **U**nblocking **K**ey

Preparing the Telephone

Installing the SIM card

⚠ Risk of swallowing small objects!
The SIM card can be removed.
Small children can swallow them.

☞ The emergency call number 112 can still be dialled even if there is no SIM card installed. The number is automatically dialled if the Emergency Call switch is activated!

Switch the phone off.

⚠ Pay attention that the SIM card is not bent or scratched. Prevent any contact with water, dirt or electrical charges.

Slide the mobile phone's battery compartment cover towards the bottom using a little force. Lift the battery compartment cover off the phone completely.

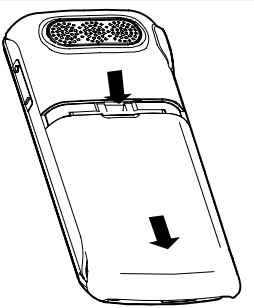

If there is already a battery inside, remove it.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Slide the SIM card with the golden contacts facing down in the SIM card holder provided for it.

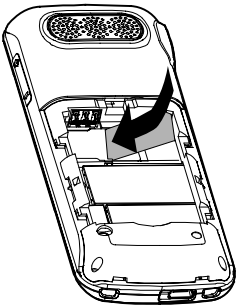

Insert the battery. The golden contacts on the battery must face towards the top left. Press lightly on the bottom end of the battery until it snaps into place.

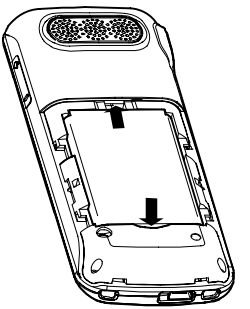

Replace the battery compartment cover back on the phone. Slide the battery compartment cover upwards until it snaps in to place.

Preparing the Telephone

Charging the battery

⚠ Before starting to charge the battery, check that it has been installed properly.
Do not remove the battery while it is being charged. This could damage the phone.

☞ When charging the battery for the first time, it should be charged for **at least** 4 hours. Some batteries only reach their full capacity after several complete charge/discharge cycles.

Charging via the mini USB port

Open the protective USB cover on the phone and plug the charging unit in the mini USB port.

Connect the charging unit as illustrated in the diagram. For safety reasons, only use the charging unit supplied.

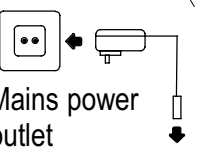

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Charging via the desktop charging unit (option)

Plug the charging unit in the mini USB port on the charging unit. Insert the phone in the charging unit to charge it.

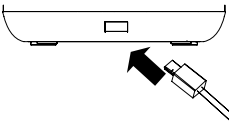

The current **battery charge status** is indicated in the display as follows:

Full

Half empty

Low

Empty

☞ It may take a few seconds before the phone indicates the charging process.
You can use the phone during the charging process.

You can also charge the phone via a PC. To do this, connect the phone to the PC using an approved mini USB cable. The charging process takes longer via the PC than when using the charging unit.

☞ Only use the mini USB cable approved by the mobile phone manufacturer. The terms of guarantee are annulled if a different cable is used.

Battery status warning

When the battery charge is low, a corresponding warning message appears in the display.

☞ Charge the battery.

In cases where the battery charge is extremely low, it is possible that the back-lighting no longer works and certain functions are no longer available.

When the battery charge drops below the minimum status, the phone switches off automatically.

Tips on the battery

Only use batteries, cables and charging units approved by the manufacturer, otherwise the battery could be damaged.

Do not short circuit the battery. Always leave the battery in the phone to avoid accidentally short circuiting the battery contacts.

Keep the battery contacts clean and free of dirt.

The battery can be charged/discharged hundreds of times but its service life is limited. Replace the battery when the battery power has decreased perceptibly.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Setting the display language

Select the language required.

Refer to Menu Structure; ☞ Page 83

The following languages are available: German, English, French, Dutch and Spanish.

Setting the time and date

Set the time and date.

Refer to Menu Structure; ☞ Page 78.

3 Operating Elements

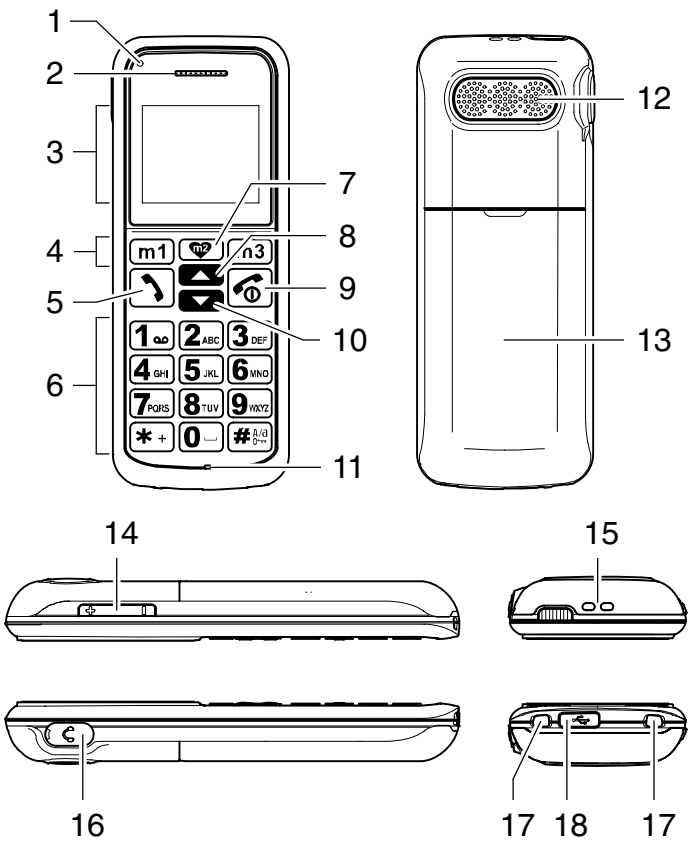

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

1 LED
2 Earpiece
3 Display
4 One-touch dialling buttons / Softkeys
5 Call button
6 Digit keys
7 Emergency Call button
8 Scroll Up button
9 On/Off button / On-hook button
10 Scroll Down button
11 Microphone
12 Loudspeaker for handsfree mode
13 Battery compartment cover
14 Volume control
15 Attachment eye for strap
16 Headset socket
17 Charging contact
18 Mini USB port with cover

Operating Elements

1 Red LED	The LED lights up continuously when the device is being charged. The LED flashes fast when the phone rings. The LED flashes slowly when you have missed calls received but not yet viewed the call list. The LED also flashes slowly when the phone is switched on but the PIN has not yet been entered.
2 Earpiece	The voice of the caller can be heard here when no headset is being worn or the handsfree equipment has not been installed and activated and the device set to handsfree mode.
3 Display	The information which appears in the display guides you through the menu structure and helps operate the mobile phone.

☞ The display is protected by foil. Remove it, if necessary.

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

4 m1 m2 m3 One-touch dialling buttons / Softkeys	The one-touch dialling buttons are used to save phone numbers and then dial them simply by pressing and holding the respective button. m1 m3 are also softkeys. The softkeys are assigned different functions in the various menus. The function currently assigned is always indicated by a text in the display directly above the softkey.
5 Call button	Take a call or dial a number. Open the call list.
6 1 - #	Digit keys Enter phone numbers and names or write a text.
7 m2 Emergency Call button	You can assign an emergency number to the button and call it directly by pressing and holding it. The button can be programmed so that the handsfree function is automatically activated.

Operating Elements

8 Scroll Up button	The button is used to navigate through menus and texts. Open the menu.
9 On/Off button, On-hook button	Switch the mobile phone on and off. Cancel the current process. End or reject a call.
10 Scroll Down button	The button is used to navigate through menus and texts. Open the phone book
11 Microphone	Is activated during a call.
12 Loudspeaker	You can hear the caller's voice from here when the phone is in Handsfree mode.
13 Battery compartment cover	Cover of the battery compartment.
14 Volume control	Regulates the volume of the caller.
15 Attachment eye	Attach a wrist strap (not contained in the material supplied).

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

16 Headset socket

Connect a headset. The earpiece, loudspeaker and microphone are deactivated. You can only hear and speak via the headset.

☞ Use a 2.5 mm stereo phone plug to connect an approved headset. If other headsets are used, there is no guarantee it will work properly; consequential damage to the headset or phone cannot be ruled out.

17 Charging contacts The phone is charged via these contacts when in the charging unit.

18 Mini USB port with cover

Used to connect a charging unit.

Buttons with special functions

Mode	Hold [*+]	Hold [#]
Standby	Activate/Deactivate “Silent” mode	Activate the key lock
Incoming call	Activate “Silent” mode for this call only	

Hold [1]	A connection is established to your mailbox and you can play messages recorded; ☞ Page 58.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

4 Preliminary Information

This chapter provides basic information on using the operating instruction manual and the telephone.

Description of operating sequences in the manual

Display	Description
	Displays the contour of buttons
1 ∞	Press the button depicted briefly
2 sec. 1 ∞	Press the button depicted for 2 seconds
Hold 1 ∞	Press and hold down the button depicted
	Enter digits or letters
	Mobile phone rings
Option	Represents text in the display
	Indicates icons in the display
Ok	Press the softkey; ☞ Page 26

Icons and texts in the handset display

Icon	Description
	Displays the battery capacity. Running-through segments, the battery is being charged.
	Signal strength of the phone connection
	Alarm is activated
	A headset is connected
	The key lock function is activated; ☞ Page 34
	A roaming[1] call is in progress
	A call is currently being made
	There are new calls in the call list; ☞ Page 48
	A new **SMS**[2] message has been received; ☞ Page 50
	The microphone is deactivated (muted); ☞ Page 34

[1] Roaming calls: Outgoing or incoming international calls possibly subject to special charges.

[2] **SMS: S**hort **M**essage **S**ervice = Service for sending text messages.

	No call alert / ‘silent’ is activated
	Ringing tone only is activated
	Vibration alert only is activated
	Vibration alert is activated first, then the ringing tone
	Vibration alert and ringing tone are activated

Standby mode

All descriptions in this operating manual assume that the mobile phone is in Standby mode. The system is switched to Standby mode by pressing the button, several times if necessary. It may be necessary to deactivate the key lock function.

Energy-save mode

When the phone has been in Standby mode for some time, it automatically switches to energy-save mode. The display no longer lights up. Press any button to reactivate Standby mode.

Softkeys

The softkeys m1 and m3 are assigned different functions in the various menus. The function buttons are always referred to in this manual according to the texts directly above them in the display.

Button	In Standby mode	In a menu
m1	- Open the main menu	- Various functions
m3	- Initiate release of the key lock function	- Various functions

Navigating in the menu

All the functions can be accessed via the various menus. Refer to Menu Structure, ☞ Page 74, for information on how to access each respective function.

Menu (m1)	Open the main menu
▲ / ▼	Select the required submenu
Ok (m1)	Open the submenu
▲ / ▼	Select the required function
Ok	Open the function
▲ / ▼ Ok	Select the setting required

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

	Use the digit keys to enter numbers or letters
m1 (softkey)	Confirm the entries
m3 (softkey)	Move one level back
	Cancel the programming and saving processes and return to Standby mode

Creating phone book entries - example

The way in which to navigate through the menus and define settings is explained by means of the example **Creating phone book entries**. Proceed as in this example for all the settings.

Menu	Open the main menu
/ Phonebook Ok	Select the phone book (contact) and confirm it
/ Add New Ok	Select the submenu and confirm it
/ To SIM or To Phone Ok	Select the memory location and confirm it

▲ / ▼ <Name> Edit Ok	Enter the name and confirm it
▲ / ▼ <Number> Edit Ok	Enter the number and confirm it

Complete any further information regarding this name according to the procedure described. When all the necessary information has been entered,

Done Save?	Conclude the phone book entry
Yes or No	Save or reject the entries

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

5 Methods of Entering Data

The digit keys are also labelled with letters for the entry of text.

The phone provides various methods by which text can be entered. These are used when creating or editing contacts in the phone book, when searching for names in the phone book and when writing SMS text messages.

☞ Not every method is always available for each application.

Methods of entering text

Multitap

In order to enter text in Multitap mode, press the button labelled with the corresponding letter/character. If the first character of the group is required, press the button once. If the second character is required, press it twice, and so on.

☞ To enter two characters assigned to the same button, press the button the respective number of times to enter the first character. Then wait for approx. 2 sec. and enter the second letter.

ABC	Multitap upper case
abc	Multitap lower case
123	Digits

☞ To switch between upper and lower case, press the # button.

Punctuation and special characters

When editing text, press the * button. Punctuation marks and special characters are displayed. Use the ▲ / ▼ buttons to select the required character and insert it by pressing the Ok softkey.

A wide range of frequently used special characters are available when editing by repeatedly pressing the 1 button.

Other entries and functions

0	Enter a space
Clear	Delete
▲ / ▼	Move the cursor

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

6 Telephoning

Taking a call

	Take the call

Rejecting a call

	Reject the call

Ending a call

	Ending a call (on-hook)

Making a call

	Enter the phone number
Clear	Delete the last digit if incorrect
	Dial the phone number

Call list

Your mobile phone stores the last numbers dialled (**redialling**),as well as **calls** received and missed, in a call list.

	Open the call list
	Select an entry and dial the number

Dialling numbers from the phone book

You must have already stored phone numbers in the phone book; ☞ Pages 27 and 39.

▼	Open the phone book
▲ / ▼ [✆]	Select an entry and dial the number

☞ To skip directly to an entry, use the digit keys to enter the first letters of the name stored. If necessary, you must press a button several times in order to enter the respective letters.

If you have assigned several phone numbers to the entry, select the number required.

▲ / ▼	Select the required number
[✆]	Dial the number

Quick dialling

You must have already assigned phone numbers to the one-touch buttons; ☞ Page 64.

3 sec. [m1], [📖] or [m3]	Press and hold the required one-touch dialling button

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Setting the receiver volume

The volume can be adjusted during a call.

☞ The volume control is located on the right-hand side of the phone.

▲ or ▼	Select the required volume

Talk time display

The duration of a call is displayed in hours, minutes and seconds during the call.

Handsfree

This function is used to listen to the caller via the loudspeaker.

While a call is in progress

H-Free	Activate the handsfree facility
H-Free	Deactivate the handsfree facility

The handsfree facility can also be activated and deactivated during a call by using the selection menu, ☞ Page 35.

Muting the microphone in the handset

The microphone in the handset can be activated and deactivated during a telephone conversation.

Option	Open the menu
▲ / ▼ Silent	
On	Deactivate the microphone (muting function activated)
Off	Activate the microphone

Key lock

The key lock is intended to prevent functions being triggered unintentionally.

3 sec. #⌂	Activate the key lock function

☞ Calls can still be taken in the normal way even when the key lock function is activated.

m3 and then #⌂ immediately	Deactivate the key lock function

Deactivating the ringing melody

The ringing melody can be deactivated.

3 sec. *+	Deactivate the ringing melody
3 sec. *+	Activate the ringing melody

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Deactivating the ringing tone for the current call

((✎)) 3 sec. [*+] Deactivate the ringing melody

☞ The ringing tone is automatically activated for the next incoming call.

Options during a call

Option Open the “Option” menu

This menu provides access to functions which can be executed during a call:

Hold

▲ / ▼ Hold Ok

Put the current call on hold

☞ When a call is put on hold, the menu option changes to “Retrieve”.

Take back the call previously put on hold:

▲ / ▼ Retrieve Ok Resume the call

Handsfree

▲ / ▼ H-Free On

Handsfree is activated

▲ / ▼ H-Free Off

Handsfree is deactivated

Telephoning

New call

▲ / ▼ New Call Ok	Select the function and activate it
	Enter the phone number and dial it

☞ The first call is put on hold; ☞ Page 35.

Phone book (contacts)

▲ / ▼ Phonebook Ok	Open the phone book and use it

SMS (text messages)

▲ / ▼ Messages Ok	Open the menu and write/edit an SMS text.

Muting

☞ Page 34

DTMF tones

▲ / ▼ DTMF	
On	Activate the DTMF tones
Off	Deactivate the DTMF tones

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

7 Emergency Call Function

This mobile phone is equipped with an emergency call function. An emergency call number can be stored. The phone can be programmed to switch to “handsfree” mode automatically when the emergency call function is selected.

Emergency calls to an emergency call centre

The number of the emergency call centre must be stored in the phone book.

☞ It may be necessary for you to register with an emergency call centre. Ask your doctor or community services for details.

Entering/Deleting emergency call numbers

Proceed as follows to define an entry in the phone book as an emergency call number.

☞ Each number you want to define as an emergency call number must be already stored in the phone book.

Menu	Open the main menu
▲ / ▼ Set M1/M2/M3 Ok	Open the menu
▲ / ▼ M2 Call Number Ok	Open the menu
▲ / ▼ From Phonebook Ok	

▲ / ▼ Ok	Select an entry

The following functions can also be used:

View	View the entry
Delete	Delete the entry

Assigning handsfree function to emergency call button

The ☎ Emergency Call button can be set up so that the handsfree function is automatically activated when the button is pressed and held; ☞ Page 77.

Menu	Open the main menu
▲ / ▼ Set M1/M2/M3 Ok	Open the menu
▲ / ▼ M2 Call Number Ok	Open the menu
Handsfree	Open the menu
Off or On Ok	Switch the handsfree function off or on and confirm it
Done	Save the setting

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

8 Phone Book

Up to 500 entries (names with several related phone numbers) can be stored in the phone book.

- Always enter the area code with all the phone numbers.
- When the memory capacity is used up, the corresponding message appears when an attempt is made to store another entry. Before new entries can be stored, old entries must be deleted.
- The phone book entries are arranged alphabetically. To skip directly to a required phone book entry, press the corresponding first letter. To search for the entries manually, use the ▲ / ▼ buttons.

☞ You provider can state how many entries you can store on your SIM card.

- Entries which you have stored on the SIM card are identified by the SIM icon preceding the name.

Entering names

The digit keys are also labelled with letters for the entry of names. Press the corresponding button the respective number of times to enter letters. Information on ways of entering text; ☞ Page 29.

Creating phone book entries

Menu	Open the main menu
▲ / ▼ Phonebook	Ok Select the phone book and confirm it
▲ / ▼ Add New	Ok Select the submenu and confirm it
▲ / ▼ To SIM or To Phone	Ok Select the memory location and confirm it

Note: If you want to assign the entries to groups later, the entries must be stored in the phone, ☞ Page 43.

▲ / ▼ <Name>	Edit Ok Enter the name and confirm it
▲ / ▼ <Phone Number>	Edit Ok Enter the number and confirm it

Complete any further information regarding this name according to the procedure described. When all the necessary information has been entered,

Done Save?	Conclude the phone book entry
Yes or No	Save or reject the entries

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Saving in Standby mode

	Enter the phone number
Save	Start the saving process
▲ / ▼ To SIM or To Phone Ok	Select the memory location and confirm it
Edit Ok	Open Edit mode, enter the name and confirm it

Complete any further information regarding this name according to the procedure described. When all the necessary information has been entered,

Done Save?	Conclude the phone book entry
Yes or No	Save or reject the entries

Modifying, editing, deleting phone book entries

Menu	Open the main menu
▲ / ▼ Phonebook Ok	Select “Phonebook” and confirm it
▲ / ▼ Search Ok	Select the submenu and confirm it

Search for the required entry as described at the beginning of this chapter.

Option	Open the menu

The following functions can also be used:

View	View the entry
Edit	Edit the entry
Delete	Delete the entry
Copy	Copy the entry (SIM ↔ phone)
Move	Move the entry (SIM ↔ phone)
Send Message	Send an SMS text

Execute the functions and then confirm them.

Editing or deleting all entries

Menu	Open the main menu
▲ / ▼ Phonebook Ok	Select “Phonebook” and confirm it

The following functions can also be used:

Delete All	Delete all the entries (SIM or phone)
Copy All	Copy all the entries (SIM or phone)

Execute the functions and then confirm them.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Groups

You can assign the entries to various groups. These groups can then be allocated different ringing melodies.

Assigning an entry to a group

Menu	Open the main menu
▲ / ▼ Phonebook Ok	Select “Phonebook” and confirm it
▲ / ▼ Caller Group Ok	Select the menu and confirm
▲ / ▼ Family Ok	Select the group and confirm it
▲ / ▼ Member List Ok	Select Member List and confirm it

If there are no entries in the Member List, only the Add menu option is available.

Add Ok	
▲ / ▼ Add	Select an entry from the list and add it

☞ All the entries stored in the phone are then displayed. Entries which are stored on the SIM card are not displayed and cannot be selected! Copy or move the entries from the SIM card into the phone as necessary, ☞ Page 42

If there are entries available in the Member List, press the Option softkey. The Add or Delete options are then available.

Editing group names

Menu	Open the main menu
▲ / ▼ Phonebook Ok	Select “Phonebook” and confirm it
▲ / ▼ Caller Group Ok	Select the menu and confirm it
▲ / ▼ Family Ok	Select the group and confirm it
Edit	Select to edit the group name
Clear	Select to delete the existing group name letter-by-letter
Ok	Enter the new group name using the digit keys and then confirm it

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Done Save?	Initiate the storing process
Yes or No	Save or reject the entries

Changing the ringing tones for groups

Menu	Open the main menu
▲ / ▼ Phonebook Ok	Select ”Phonebook” and confirm it
▲ / ▼ Caller Group Ok	Select the menu and confirm it
▲ / ▼ Family Ok	Select the group and confirm it
▲ / ▼ MIDI 1 Change	Select the 2nd menu option from the top and confirm it (the name of the ringing tone last set is always displayed; here: MIDI 1)
▲ / ▼ Ok	Select a new ringing tone for the group
Done Save?	Initiate the saving process
Yes or No	Save or reject the entries

Phone book settings

Menu — Open the main menu

▲ / ▼ Phonebook Ok
Select “Phonebook” and confirm it

▲ / ▼ Settings Ok
Select the menu and confirm it

The following functions are available:

Memory status

Memory Status

The number of contacts stored and the maximum number of contacts which may be stored are displayed, respectively, for both the SIM and mobile phone.

Example: 10/500 = 10 entries have been stored, the maximum number possible is 500 entries.

Fields

Fields

Select the fields in the phone book which should be displayed. There are a total of 7 fields available: Home Number, Company Name, Email Address, Office Number, Fax Number, Associate Sound and Associate Sound.

▲ / ▼ Select a field

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

On or Off		
Done	Save?	Initiate the storing process
Yes or No		Save or reject the entries

9 Call List

The mobile phone is equipped with a call list.
Your mobile stores the last phone numbers dialled, taken and received but missed.

☞ If one of the phone numbers received matches an entry in the phone book, the associated name appears.

Icons displayed

	The numbers dialled
	The calls received
	The missed calls

Dialling from the call list

	Open the call list
/	Select an entry and dial it

Displaying list details

Open the call list.

/ Ok	Select an entry and display details
Option	Open the menu

The following functions are available:

Delete	Delete the entry

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Save	Save the entry (SIM or phone)
Ring	Dial the entry
Edit	Edit the entry
Delete All	Delete the entire call list

Execute the functions and then confirm them.

10 SMS - Text Messages

☞ It is possible that not all functions described are supported by every provider. Therefore, please contact your local mobile phone provider for details.

SMS settings

☞ The distribution of text messages is performed via a Service Centre (**SMSC**)[1]. If you want to send and receive text messages, you must program a Service Centre number in your phone. Normally, this has already been set up by your service provider.

Menu	Open the main menu
▲ / ▼ Messages Ok	Select the submenu and confirm it
▲ / ▼ Message Settings Ok	Select the submenu and confirm it

[1] **SMSC: S**hort **M**essage **S**ervice **C**entre = Service centre controlling the transfer of text messages.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

▲ / ▼ Profile Setting	Ok
	Select the submenu and confirm it

SMS service center

Navigate to the “Profile Setting” menu.

▲ / ▼ Profile Setting	Ok
	Select the submenu and confirm it
▲ / ▼ MSC No.	Edit
	Select the submenu and confirm it
Ok	Enter or edit the **MSC** number and save the setting

Validity

You can use the second menu option to define how long an attempt should be made to deliver a message which you have sent. Note: The current setting is always displayed.

Navigate to the “Profile Setting” menu.

▲ / ▼ Profile Setting	Ok
	Select the menu and confirm it
▲ / ▼ 2nd entry from the top	Change
	Select the menu and confirm it

SMS - Text Messages

There are 5 different settings available for selection.

▲ / ▼ Maximum Ok

Select the duration

Done Save? Initiate the storing process

Yes or No Save or reject the entries

SMS settings

Navigate to the “Profile Setting” menu.

▲ / ▼ Common Setting Ok

Select the menu and confirm it

Delivery report

▲ / ▼ Delivery Report On or Off

Select “Delivery Report: On” to receive the corresponding delivery confirmation report that a message sent has been delivered.

Done Save? Initiate the storing process

Yes softkey or No Save or reject the setting

Reply path

▲ / ▼ Reply Path On or Off

Select “Reply Path: On” in order to send the reply path of your provider with the message. Contact your provider for further details.

Done Save? Initiate the storing process

Yes or No Save or reject the setting

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

SMS memory status

Navigate to the “Profile Setting” menu.

▲ / ▼ Memory Status Ok

Select the menu and confirm

☞ The occupied and free memory locations on the mobile phone and SIM card are displayed.

Writing an SMS text

☞ A text message can contain up to 612 characters, including spaces.

Menu — Open the main menu

▲ / ▼ Messages Ok

Select the submenu and confirm it

▲ / ▼ Write Message Ok

Select the function and confirm it

Write the text.

☞ Information on ways of entering text; ☞ Page 29.

Send — Open the menu

The following functions are available

SMS - Text Messages

Send Only | Ok | or | Search

Enter the number or select from the phone book

Save and Send | Ok | or | Search

Enter the number or select from the phone book. The SMS text is sent and saved in the Outbox folder.

Save | Ok | or | Search

The SMS text is saved in the Outbox folder.

Send To Many | Ok

The message can be sent to several recipients selected from the phone book.

Send By Group | Ok

The SMS text is sent to all the members of a group.

Execute the functions and then confirm them.

SMS text messages sent and received

☞ Texts received are indicated by a ringing tone which you have set. “New Message!” appears in the display. Press the “Read” softkey to display the message.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

SMS texts received are stored in the “Inbox” folder.

SMS texts sent are saved in the “Outbox” folder as are the drafts.

Editing stored texts

Menu	Open the main menu
▲ / ▼ Messages Ok	Select the submenu and confirm it
▲ / ▼ Inbox or Outbox Ok	Select the option and confirm it
▲ / ▼ Select SMS View	Select SMS and confirm it
Option	Open the menu

The following functions are available:

Reply	Reply to the number from which the text was sent
Forward	Forward the text to a different number
Edit	Edit the SMS text
Delete	Delete the SMS text
Copy to Phone	Copy the SMS text

SMS - Text Messages

Move to Phone	Move the SMS text
Delete All	Delete all the SMS texts
Copy All	Copy all the SMS texts (SIM ⇔phone)
Move	Move all the SMS texts (SIM ⇔ phone)
Use Number	Use the number from which the text was sent

Execute the functions and then confirm them.

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

11 Mailbox

The Mailbox is an answering machine provided within the mobile telecommunication network.

☞ It is possible that not all functions described are supported by every provider. Therefore, please contact your local mobile phone provider for details. They may concern services which are subject to charges.

☞ In order to use the "Voice Mail" mailbox, the relevant phone number must be programmed in your mobile phone. Normally, this has already been set up by your service provider.

Setting up the mailbox

Menu	Open the main menu
▲ / ▼ Messages Ok	Select the submenu and confirm it
▲ / ▼ Message Settings Ok	Select the submenu and confirm it
▲ / ▼ Voice Mail Ok	Select the submenu and confirm it

Mailbox

▲ / ▼ <Empty> Edit

Select the menu and start editing

☞ If a number is already available, this is displayed instead of “<Empty>”.

Ok

Enter or edit the mailbox number and save it

The following functions are also available in the “Voice Mail” menu:

Erase Ok

The voice mail number is deleted

Connect to Voice Mail Ok

The voice mail number is dialled.

Execute the functions and then confirm them.

Playing messages in the mailbox

Navigate to the “Connect to Voice Mail” menu option, as previously described, and press the Ok softkey.
Alternatively: Press and hold the 1 button in Standby mode.

A connection is established to your mailbox and you can play messages recorded.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

12 Services

☞ It is possible that not all functions described are supported by every provider. Therefore, please contact your local mobile phone provider for details. They may concern services which are subject to charges.

Several service function are available in the “Call Setting” menu. Therefore, navigate to this menu:

Menu	Open the main menu
▲ / ▼ Phone Setting	Ok Select the submenu and confirm it
▲ / ▼ Call Setting	Ok Select the submenu and confirm it

Caller ID

Open the “Call Setting” menu:

▲ / ▼ Caller ID	Ok Select the menu and confirm it

You can choose between 3 different settings.
Refer to Menu Structure; ☞ Page 87.

Call waiting

This function issues an acoustic signal to inform you that another call has been received while the current call is in progress.

Open the “Call Setting” menu:

▲ / ▼ Call Waiting Ok

Select the menu and confirm it

Refer to Menu Structure; ☞ Page 88.

Forwarding calls

The following functions enable incoming calls to be transferred to other phone numbers.

Open the “Call Setting” menu:

▲ / ▼ Call Divert Ok

Select the menu and confirm it

Select the setting to define which calls should be redirected:

All Voice Calls

If Unreachable

If No Answer

If busy

and then select

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Activate Ok or	Search / Ok Enter the number or select from the phone book. The call forwarding function is then active.
Deactivate Ok	The corresponding call transfer is deactivated
Check Status Ok	Display the current setting

Proceed as follows to deactivate all call forwarding settings:

Cancel All Divert Ok

Call barring

The following function is used to restrict calls which can be received and made.

Open the “Call Setting” menu:

/ Call Barring Ok Select the menu and confirm it

Refer to Menu Structure; ☞ Page 88.

Automatic redialling

When this function is activated, redialling is initiated automatically if the number dialled is “engaged”.

Open the “Call Setting” menu:

▲ / ▼ Auto Redial Ok	Select the menu and confirm it
Off or On Ok	Select the menu and confirm it

SIM Tool Kit

Your mobile phone supports SIM Tool Kit[1] (**STK**).

☞ You receive information on using STK, charge rates, data and offers is from your SIM card service provider.

Menu	Open the main menu
▲ / ▼ SIM Toolkit Ok	Select the submenu and confirm it

Follow the menu structure displayed.

[1] **S**IM **T**ool **K**it (**STK**) = Information service from your telephone network provider

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Broadcast messages[1]

You mobile phone can receive broadcast messages.

☞ Information on broadcast messages, charge rates, data and offers can be obtained from your SIM card service provider.

Menu	Open the main menu
▲ / ▼ Messages	Ok Select the menu and confirm it
▲ / ▼ Message Settings	Ok Select the menu and confirm it
▲ / ▼ Broadcast Message	Ok Select the menu and confirm it

Refer to Menu Structure; ☞ Page 75.

[1] Broadcast, also referred to as **C**ell **B**roadcast (**CB**) = Information services by your telephone network provider

13 Settings

One-touch dialling buttons

It is possible to assign phone numbers to the one-touch dialling buttons m1, 📖 or m3 which are then dialled directly by pressing and holding the corresponding button; ☞ Page 32.

☞ Each number you want to define as a one-touch dialling number must be stored in the phone book.

Assigning a phone number to a one-touch dialling button:

Menu	Open the main menu
▲ / ▼ Set M1/M2/M3 Ok	Select the submenu and confirm it
▲ / ▼ M1 Call Number Ok	Select the one-touch dialling button and confirm it
▲ / ▼ From Phonebook Ok	
▲ / ▼ Select entry Ok	Select an entry from the phone book and save it

If a number has already been assigned to the one-touch dialling button selected, the menu offers two

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

options:

View	To display the number assigned
Delete	To delete the number assigned

An automatic handfree facility can also be activated for the one-touch dialling button; ☞ Page 38.

Execute the functions and then confirm them.

Clock and alarm

This menu option can be used to set and change the date, time and alarms.

Open the menu:

Menu	Open the main menu
▲ / ▼ Clock & Alarm Ok	Select the submenu and confirm it

Refer to Menu Structure; ☞ Page 78.

Calendar

After opening this menu option, the calendar for the current month appears. The current day is marked.

Use the ▲ and ▼ buttons to move to other days or move directly to a specific date via the selection menu.

Settings

Open the menu option:

Menu	Open the main menu
▲ / ▼ Calendar	Ok Select the submenu and confirm it
Option	Jump To Date Ok
Ok	Enter the date and confirm it

Flashing keypad

Use this menu option to select whether the keypad lighting should flash in the event of incoming calls.

Menu	Open the main menu
▲ / ▼ Phone Setting	Ok Select the menu and confirm it
▲ / ▼ Call Setting	Ok Select the menu and confirm it
▲ / ▼ Key LED flash	Change Select the menu and confirm it
▲ / ▼ Off or On	Ok Select the setting and confirm it

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Network settings

Network selection: This menu can be used to select mobile telecommunication networks other than your own mobile network provider. However, the corresponding agreements must have been concluded.

Preferred networks: You can select and edit the mobile telecommunication networks prescribed on the SIM card. Use the ▲ / ▼ buttons to change the priority.

☞ It is possible that not all functions described are supported by every provider. Therefore, please contact your local mobile phone provider for details. They may concern services which are subject to charges.

Menu	Open the main menu
▲ / ▼ Phone Setting Ok	Select the menu and confirm it
▲ / ▼ Network Setting Ok	Select the menu and confirm it
Network Selection Preferred Networks	or

Refer to Menu Structure; ☞ Page 90.

Navigation buttons

You can assign various menu options to the digit keys 2 to 9. Then hold the corresponding key pressed longer than 3 seconds to open the respective menu.

Menu	Open the main menu
▲ / ▼ Phone Setting Ok	Select the menu and confirm
▲ / ▼ Set Fast key 2-9 Ok	Select the menu and confirm
▲ / ▼ 4-key Edit	Select the required key and confirm it
▲ / ▼ Calendar Ok	Select the required submenu and confirm it

Refer to Menu Structure; ☞ Page 90.

☞ In the example above, the calendar is opened when the 4 GHI button is pressed for longer than 3 seconds when in Standby mode.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Security settings

This menu is used to define which functions on the phone or SIM card should be protected by a password/PIN. The PIN and password can be changed.

☞ PIN and PIN2 are supplied together with the SIM card. Further information is available from your SIM card provider.

Menu — Open the main menu

▲ / ▼ Phone Setting Ok — Select the menu and confirm it

▲ / ▼ Security Setting Ok — Select the menu and confirm it

Main Menu Lock

☞ The default password programmed at the factory is 1122. If the lock is active, you can only access the main menu after entering the password.

SIM Lock

☞ The password is supplied together with the SIM card. If you deactivate the SIM Lock, you need not enter the PIN after switching the mobile phone on.
It is recommended to leave the SIM Lock on to prevent unauthorised persons from using the mobile phone.

Phone Lock

☞ The default password programmed at the factory is 1122. If this lock is active, you must first enter the password for the Phone Lock after switching the mobile phone on and then enter the PIN.

Change Password Change the passwords/PIN

Refer to Menu Structure; ☞ Pages 91 and 92.

Phone settings

Navigate to the “Phone Setting” menu:

Menu Open the main menu

▲ / ▼ Phone Setting Ok
Select the menu and confirm

Display settings

Use this menu option to adapt the phone display to your own personal needs.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Navigate to the “Phone Setting” menu.

◄ / ► Display Setting Ok

Select the submenu and confirm it

Select

Language	to set the display language
Greeting Text	to edit the text displayed when the phone is switched on
Screen Saver	to select and setup a screen saver
Contrast	to adjust the display contrast setting
LCD Backlight	to set the brightness and lighting duration of the back-lighting
Font Size	to switch between a “Small” and “Large” font.

Refer to Menu Structure; ☞ Pages 83 to 85.

Audio settings

Use this menu to adapt the phone’s ringing tones to your own personal needs.

Navigate to the “Phone Setting” menu.

▲ / ▼ Sound Setting Ok	Select the submenu and confirm it

Select

Set Sound	to select specific ringing tones for various alert ringing signals
Set Volume	to select specific volumes for the various alert ringing signals
Alert Type	to select whether you are alerted of incoming calls via a ringing tone or vibration

Refer to Menu Structure; ☞ Pages 86 and 87.

Automatic key lock

You can set up the mobile phone so that the key lock is automatically activated after a certain time in Standby mode.

Navigate to the “Phone Setting” menu.

▲ / ▼ Auto KeyLock Ok	Select the submenu and confirm it

Select

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

None Ok	The automatic function is deactivated or
(e.g.) 5 min. Ok	The key lock is automatically activated after the selected time

Default settings

The mobile phone is reset to its default (factory) settings.

Default settings; ☞ Page 99.

Navigate to the “Phone Setting” menu.

▲ / ▼ Restore Factory Settings Ok	Select the submenu and confirm it

Refer to Menu Structure; ☞ Page 92.

☞ During the course of the menu, you will be prompted for the phone password. The default password programmed at the factory is 1122.

14 Menu Structure

Main menu

Open the main menu by pressing m1 = Menu button. Then press the ▼ / ▲ buttons to select a submenu or option and follow the dialogue in the display using the softkeys which appear.

The softkeys m1 and m3 are assigned different functions, e.g. Option, Edit, Change, Select, On, Off, Yes, No, Ok, Done, Back etc.

Softkeys (grey) are only displayed in a few exceptional cases in the following menu structure.

For further information on the menu and operation, ☞ Chapter 4.

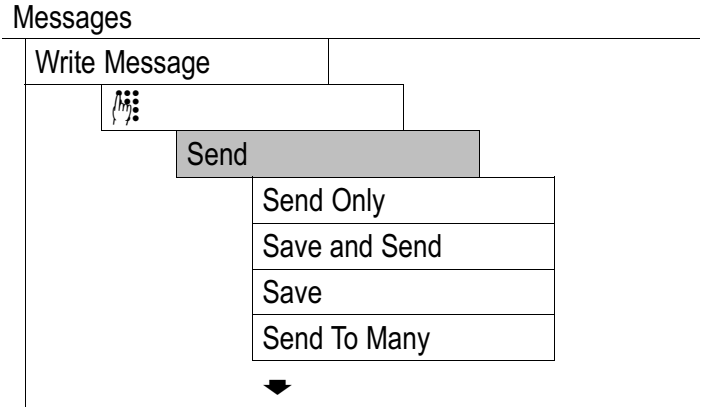

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

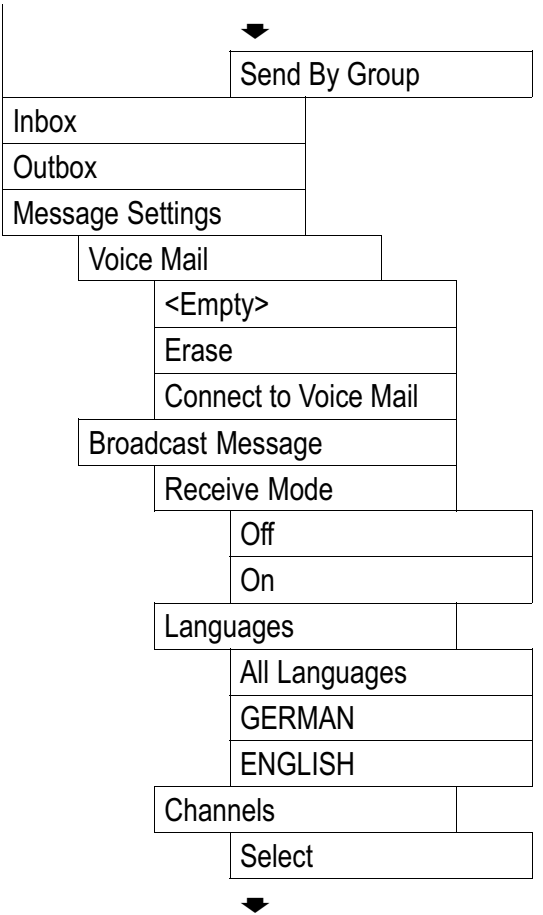
Send By Group
Inbox
Outbox
Message Settings
Voice Mail
<Empty>
Erase
Connect to Voice Mail
Broadcast Message
Receive Mode
Off
On
Languages
All Languages
GERMAN
ENGLISH
Channels
Select

Menu Structure

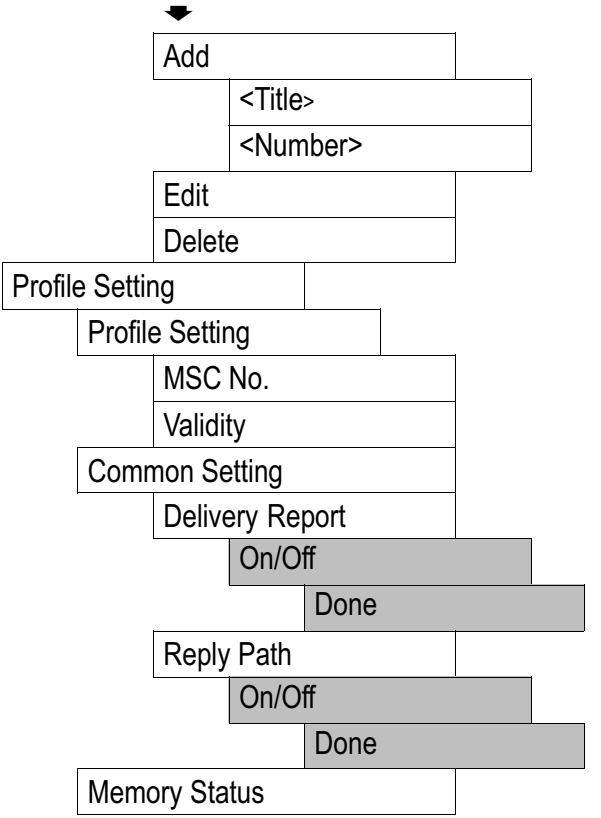

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

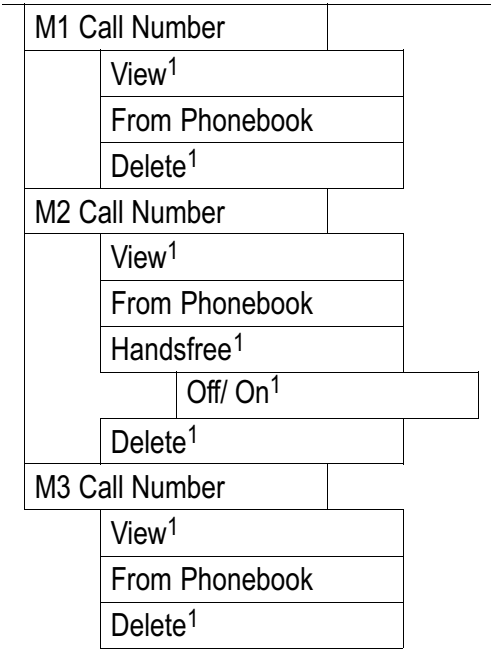

[1] Is not displayed as long as no number has been programmed.

Menu Structure

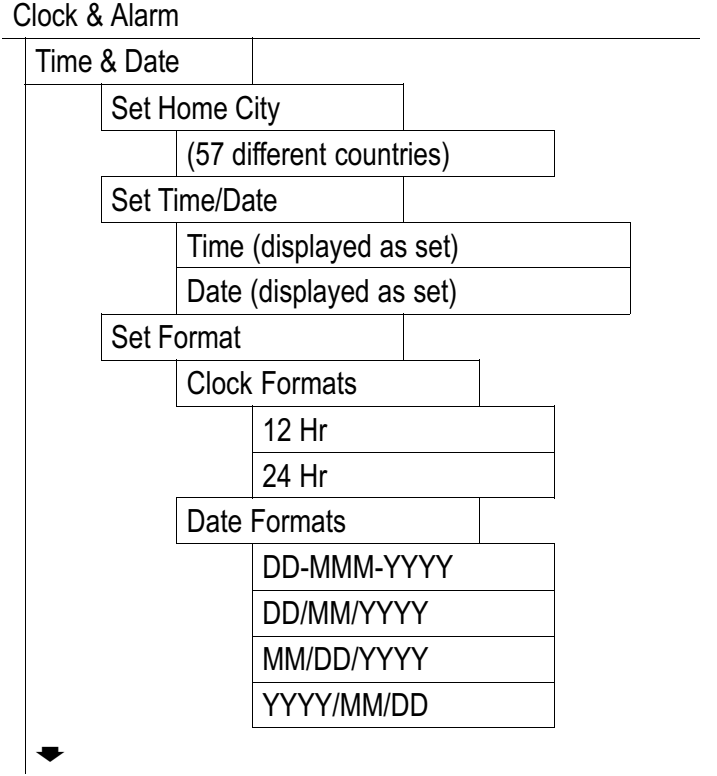

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

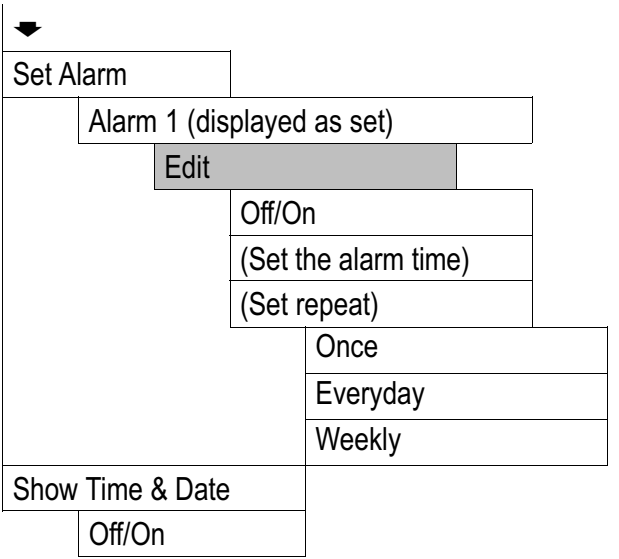
Set Alarm
Alarm 1 (displayed as set)
Edit
Off/On
(Set the alarm time)
(Set repeat)
Once
Everyday
Weekly
Show Time & Date
Off/On

Menu Structure

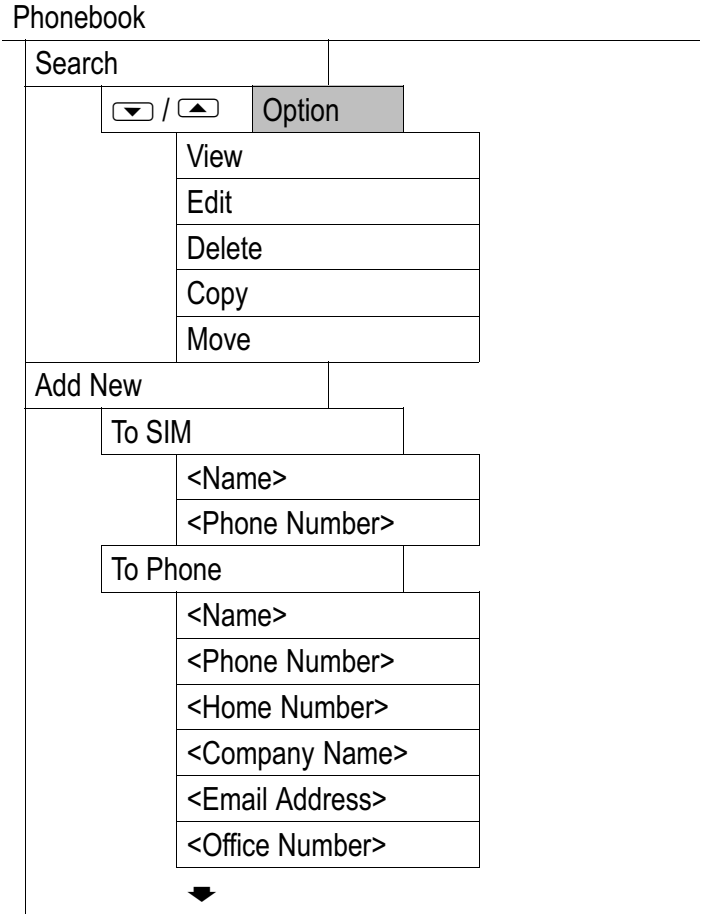

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

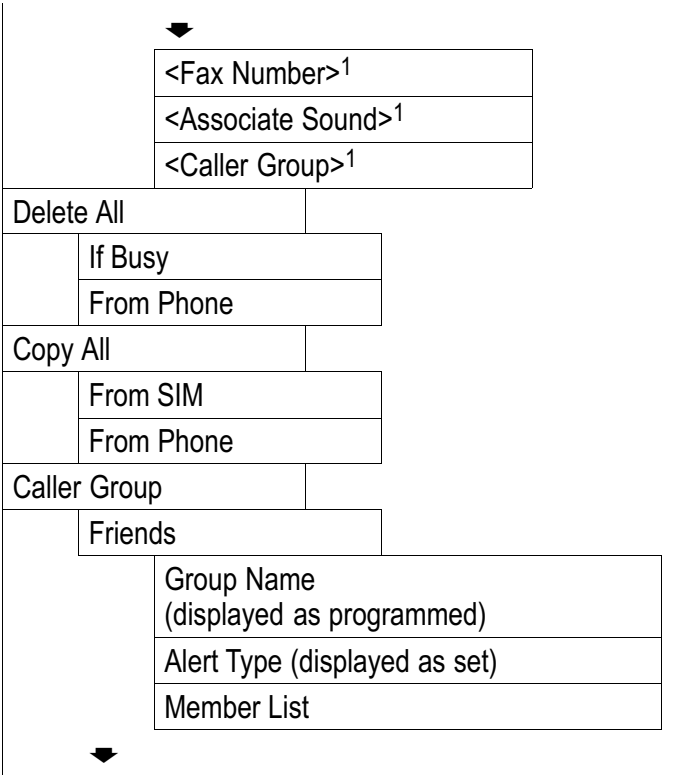

1 Are not displayed in the default state but can be added using the “Fields” menu option.

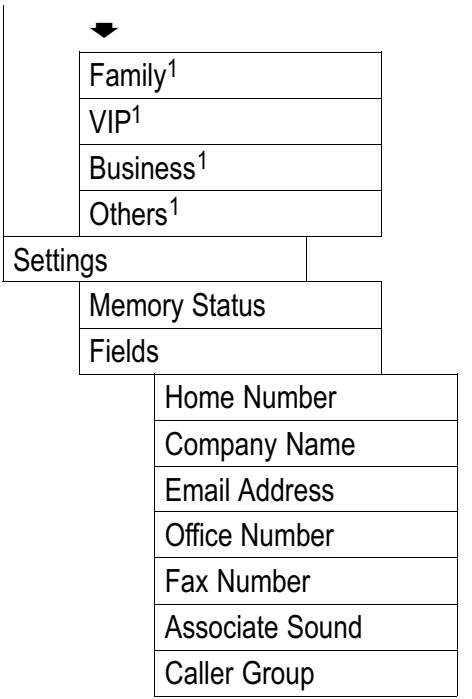

[1] Submenu as for “Friends” ☞ Page 81

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

- Calendar
  - Option
    - Jump To Date

- Phone Setting
  - Display Setting
    - Language
      - English
      - Español
      - Dutch
      - German
      - Français
    - Greeting Text
      - Off/On
      - Edit Text (Display text as programmed)
    - Screen Saver
      - Settings

Menu Structure

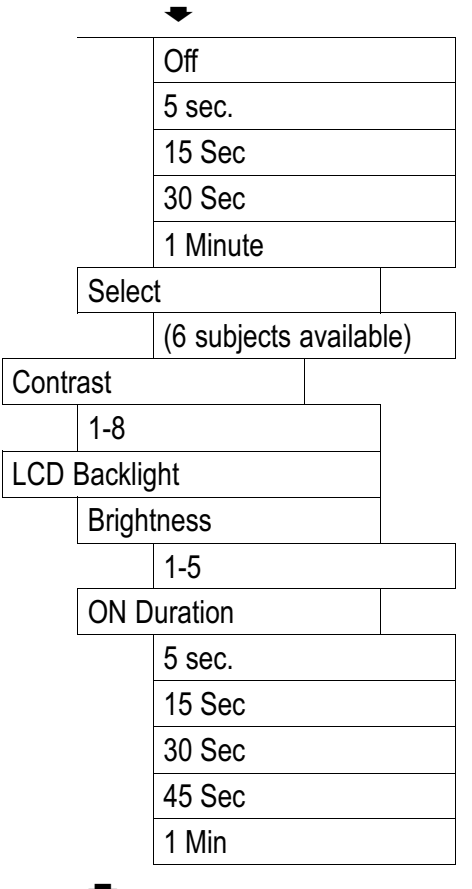

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

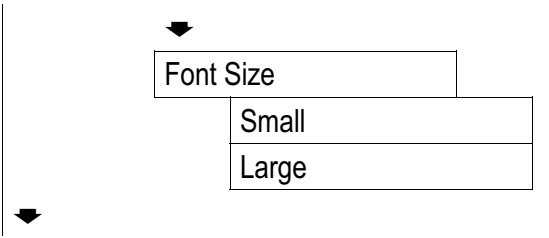
Font Size
Small
Large

Menu Structure

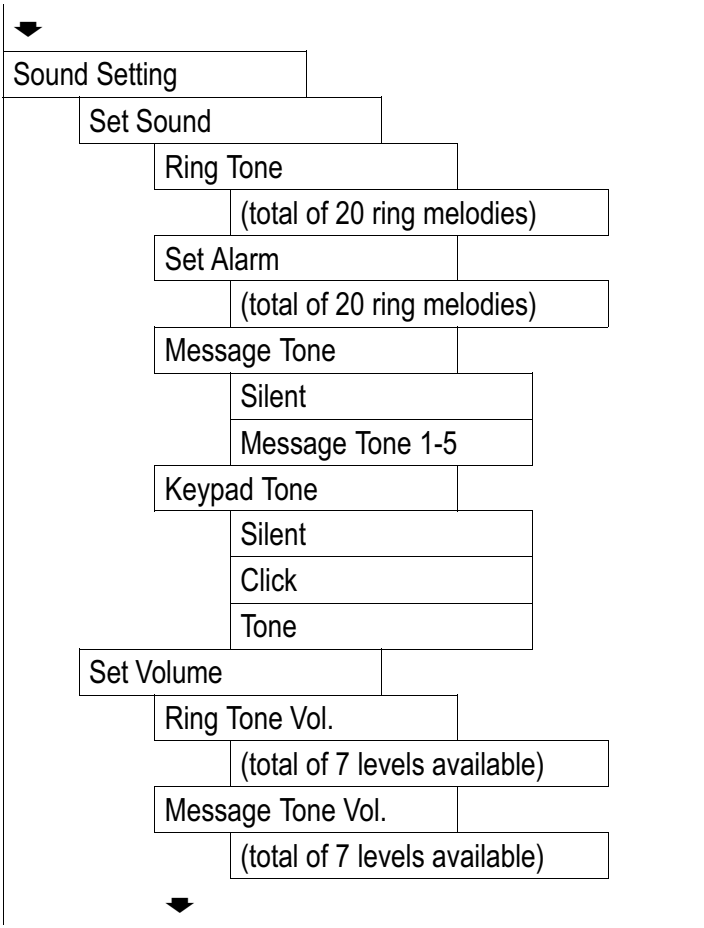

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

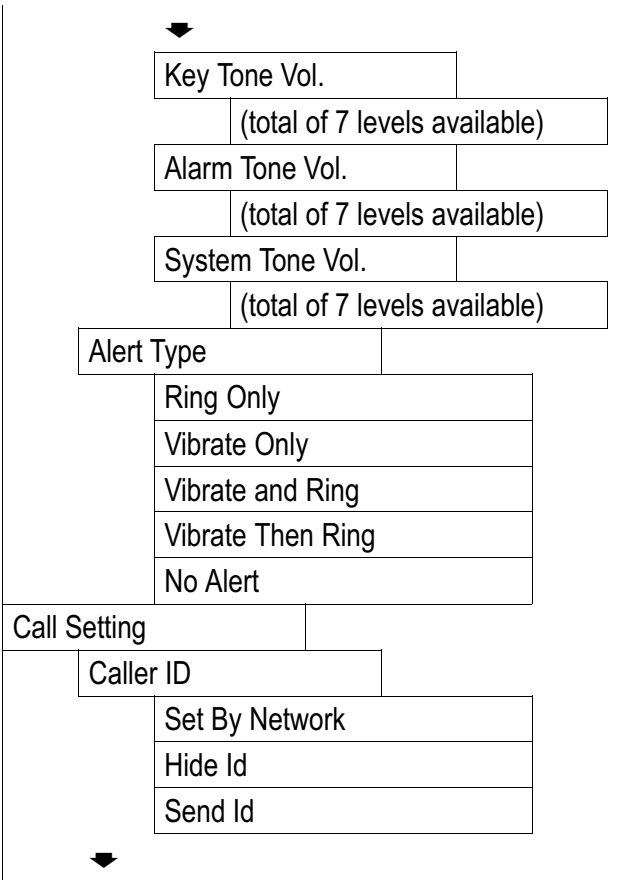
Key Tone Vol.
(total of 7 levels available)
Alarm Tone Vol.
(total of 7 levels available)
System Tone Vol.
(total of 7 levels available)
Alert Type
Ring Only
Vibrate Only
Vibrate and Ring
Vibrate Then Ring
No Alert
Call Setting
Caller ID
Set By Network
Hide Id
Send Id

Menu Structure

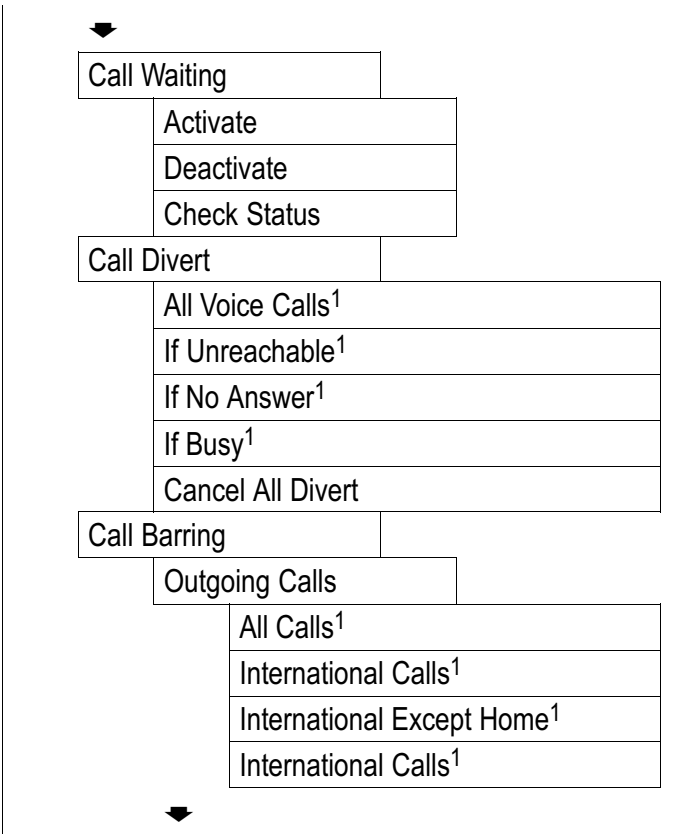

1 Submenu as for “Call Waiting” ☞ Page 88

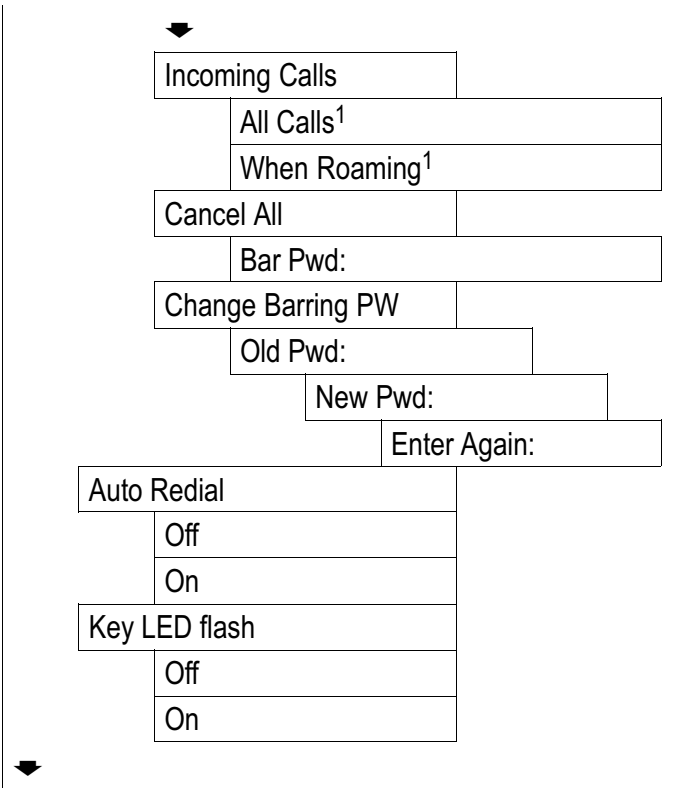

[1] Submenu as for “Call Waiting” ☞ Page 88

Menu Structure

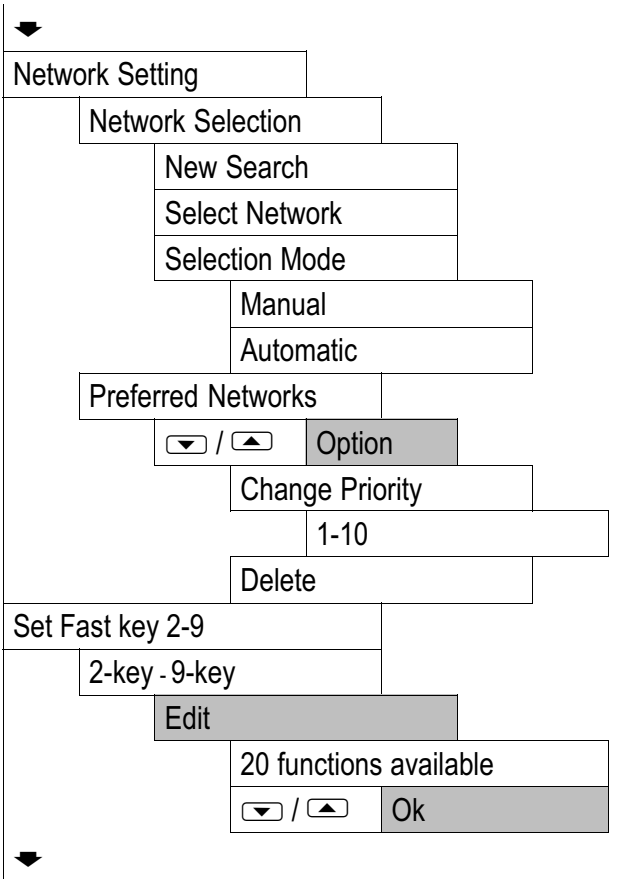

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

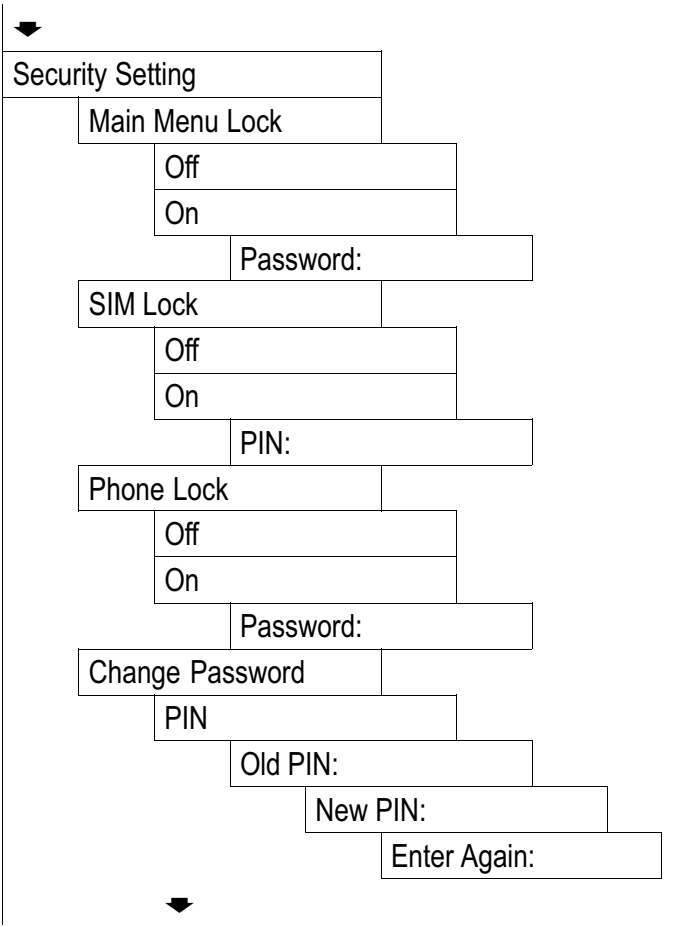
Security Setting
Main Menu Lock
Off
On
Password:
SIM Lock
Off
On
PIN:
Phone Lock
Off
On
Password:
Change Password
PIN
Old PIN:
New PIN:
Enter Again:

Menu Structure

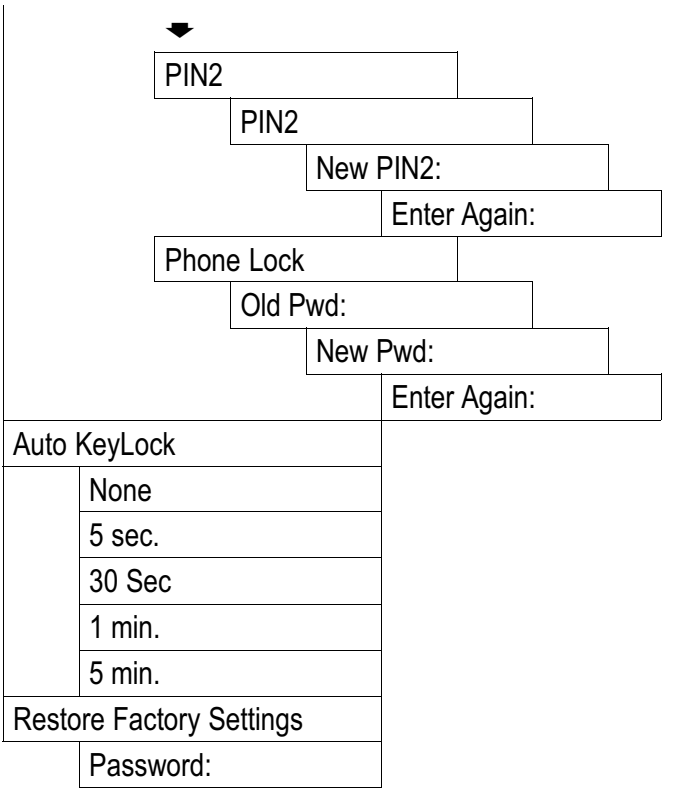

SIM Toolkit

(provider-dependent menu)

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

15 In Case of Problems

Service hotline

Should problems arise with the telephone, please refer to the following information first. In the case of technical problems, please contact our service hotline under 0180 5 001388 (costs via a conventional German telephone network at time of going to print: 14 ct/min., costs may vary from mobile telephone networks). In the case of claims under the terms of guarantee, please contact your sales outlet. There is a 2 year period of guarantee.

Problems and solutions

Problems	Solutions
The mobile phone cannot be switched on.	- No battery inserted. - Battery is not loaded.
The display is “locked” when the mobile is switched on.	- Enter the PUK to “unlock” the SIM card. Contact your service provider.

No signal quality is displayed.	- No network connection. The mobile phone is in a location where there is no network service. Move to a different location or contact your service provider.
Keypad does not function or only functions very slowly.	- The operating speed of the display is reduced in the case of low temperatures. This is normal. Use the phone in a warmer location.
A message appears in the display for some functions, indicating execution/use is not possible.	- Many functions can only be used after the respective service has been applied for. Contact your service provider for more details.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

No display during the charging process.	- The battery status is very low or the mobile phone is being operated outside the recommended temperature range (0º - 40ºC). Wait a few minutes or move the phone to a warmer location. Start the charging process again.
No connection to the mobile telecommunication network.	- Contact your service provider.
The ”Insert SIM” message appears in the display.	- Ensure that the SIM card has been installed correctly. Contact your service provider, if necessary.

The battery cannot be charged or is empty within a short time.	- Battery is defect. - Place the phone correctly in the charging unit or connect the charging unit properly. Clean the contact surfaces on the mobile phone and charging unit with a soft, dry cloth. - Charge the mobile for 4 hours.

 Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

16 Technical Properties

Technical data

Feature	Value
Standard	**GSM**[1] 900, 1800 MHz Dualband
Dimensions	50 x 128 x 16.5 mm (W x H x D)
Weight	< 100 g incl. battery
Power supply	Input: 100-240 V, 50-60 Hz, 0.2 A Output: Mini-USB 5 V, 800 mA
Battery	Model: BP-75LI 3.7 V, 750 mAh Charge duration: Approx. 2 h
Standby time	Up to 180 h
Max. talk time	Up to 150 min
Display	1.77” monochrome, Resolution 128 x 128 Orange-coloured lighting

[1] **GSM** = **G**lobal **S**ystem for **M**obile Communications. Standard for mobile phones.

Technical Properties

Key lighting	White
LED	Red
Languages	German, English, French, Spanish, Dutch
Phone book	Max. 500 contacts
SMS	Standard SMS Memory capacity: Max. 150 entries (Inbox and Outbox combined)
Memory size	1 MB
One-touch dialling buttons	3 pieces, one as Emergency Call button
Ringing volume	Max. 100 dB
Permissible ambient temperature	0°C to 40°C
Permissible relative humidity	30% to 75%

☞ All Rights Reserved!

Default settings

The default settings can be restored via the menu. Refer to Page 92 for the sequence of menu option selections.

M1, M2, M3	Empty
Set Home City	Berlin
Set Format	24 Hr
	DD/MM/YYYY
Show Time & Date	On
Fields	Name
	Phone Number
	Home Number
	Company Name
	Email Address
	Office Number
Message Settings	Delivery Report - Off
	Reply Path - Off
	Validity - Maximum
	Receive Mode - Off
Language	GERMAN
Greeting Text	On: Welcome

Technical Properties

Screen Saver	Off
	30 Sec
	Digital Clock
Display Setting	Contrast - 1
LCD Backlight	Brightness - 5
	ON Duration - 15 Sec
Font Size	Small
Set Sound	Ring Tone - 10
	Set Alarm - 4
	Message Tone - 1
	Keypad Tone - Click
Set Volume	Ring Tone Vol. - 5
	Alarm Tone Vol. - 5
	Message Tone Vol. - 5
	Key Tone Vol. - 5
	System Tone Vol. - 3
Alert Type	Ring Only
Key LED flash	Off
Auto Redial	Off
Caller ID	Set By Network

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

Selection Mode	Automatic
Set Fast key 2-9	2 - Language
	3 - Time & Date
	4 - Set Alarm
	5 - Call Setting
	6 - Set M1/M2/M3
	7 - Inbox
	8 - Calendar
	9 - Font Size
Main Menu Lock	Off
Auto KeyLock	None

Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive:

1999/5/EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

CE

Conformity with the above mentioned directive is confirmed by the CE symbol on the device.

To view the complete Declaration of Conformity, please refer to the free download available on our web site www.audioline.de.

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

17 SAR Information

Information on radio frequency emissions and specific absorption rates (**SAR** = **S**pecific **A**bsorption **R**ate).

All the applicable safety standards related to radio frequency emissions were implemented during the development of this mobile phone. The limit values are based on scientific directives and contain a safety margin in order to guarantee the safety of all persons regardless of age and state of health.

The values specified in the directive concerning radio frequency emissions are based on a unit called SAR. SAR values are established using standard methods in which the phone is operated in all possible frequency bands with the highest power output.

Although the SAR values of various phone models can differ, all the models were developed to maintain the relevant directives on radio frequency emissions.

SAR Information

The following information applies to residents of countries which, as with the European Union, have adopted the SAR limit value recommended by the ICNIRP (**I**nternational **C**ommission on **N**on-**I**onizing **R**adiation **P**rotection) which lies at 2W/Kg (averaged from 10 gram tissue):

The highest SAR value measured, averaged over 10 g tissue, was < 0.526 W/kg for this mobile phone measured at the ear.

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

18 Maintenance / Guarantee

Maintenance

- Clean the housing surfaces with a soft, fluff-free cloth.
- Do not use any cleaning agents or solvents.

Guarantee

AUDIOLINE equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply when a device malfunction was caused by the mobile telecommunications network operator/ provider. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.

All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties.

Damage caused as a result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of Gods and other external influences are ex-

cluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defect parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.

If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the AUDIOLINE device together with the purchase receipt. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet. No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

19 Index

A

Accessories, 8
Alarm, 65
Audio settings, 71
Automatic key lock, 72
Automatic redialling, 62

B

Barcode label, 8
Battery charge status, 12
Battery status warning, 14
Broadcast messages, 63

C

Calendar, 65
Call barring, 61
Call list, 31, 48
Call settings, 59, 66
Call waiting, 60
Caller identification, 59
Calling back, 31
Calling back missed calls, 31
Charging, 12
Clock, 65
Creating, 27
Creating phone book entries, 40

D

Date, 15
Deactivating
the ringing melody, 34
Declaration of Conformity, 102
Default settings, 73, 99
Delete text, 30
Deleting, 41
Dialling, 32
Display, 24
Display icons, 24
Display language, 15
Display settings, 70
Displaying list details, 48
DTMF, 36
During a call, 35

E

Editing, 41
Emergency call function, 37
Emergency calls to an
emergency call centre, 37
Ending a call, 31
Energy-save mode, 25
Entering names, 39
Entering spaces, 30
Entering text, 39
Entering/Deleting emergency
call numbers, 37

Index

F

Font size, 71
Forwarding calls, 60

G

Groups, 43
Guarantee, 105

H

Handsfree, 33, 35
Handsfree function for emergency call button, 38
Hold, 35

I

Icons, 24

K

Key lock, 34

M

Mailbox, 57
Main menu, 74
Maintenance , 105
Making a call, 31
Menu structure, 74
Methods of entering data, 29
Methods of entering text, 29
Modifying, 41
Moving the cursor, 30
Multitap, 29
Muting, 34
Muting button, 34

N

Navigation buttons, 68
Network settings, 67
New call, 36
Notation, 23

O

On-hook, 31
One-touch dialling buttons, 64
Operating elements, 16
Operation, 23

P

Package contents, 8
Passwords, 9
Phone book, 32, 36, 39
Phone book entries, 27
Phone settings, 70
PIN/PIN2 code, 9
Problems, 93
Problems and solutions, 93
PUK/PUK2 code, 9
Punctuation and special characters, 30

Q

Quickdial, 32

R

Receiver volume, 33
Redialling, 31
Reject, 31
Rejecting a call, 31

Service-Hotline Germany: Tel. 0180 5 001388, cost via German landline at time of going to print: 14 ct/min., different costs possible via mobile telephone systems

S

Safety information, 4
SAR Information, 103
Saving, 27
Security settings, 69
Service-Hotline, 93
Services, 59
Settings, 64
SIM card, 10
SIM Tool Kit, 62
SMS, 36, 50
SMS settings, 50
Softkeys, 26
Standby mode, 25
Starting up, 8
Switching off, 9
Switching on, 9

T

Taking a call, 31
Talk time, 33
Technical data, 97
Telephoning, 31
Time, 15
Tips on the battery, 14
Troubleshooting, 93

W

Writing an SMS text, 53

Important Notes on the Guarantee

The period of guarantee for the AUDIOLINE product begins on the date of purchase. Rights to claims under the terms of guarantee relate to deficiencies resulting from material or production faults. Rights to claims under the terms of guarantee are annulled following intervention by the purchaser or third parties. Damage caused as a result of improper handling or operation, normal wear and tear, incorrect positioning or storing, improper connection or installation, Acts of God or other external influence are not covered by the terms of guarantee.

CLAIMS UNDER THE TERMS OF GUARANTEE MAY ONLY BE ASSERTED TO THE RETAILER WHERE THE EQUIPMENT WAS PURCHASED, WHEREBY THE PURCHASE RECEIPT MUST ALSO BE SUBMITTED.

TO PREVENT UNNECESSARY LONG DELAYS, PLEASE DO NOT SEND EQUIPMENT UNDER COMPLAINT TO OUR OFFICE ADDRESS.

IN THE CASE OF QUESTIONS CONCERNING OPERATION OR THE TERMS OF GUARANTEE, PLEASE REFER TO THE OPERATING MANUAL OR CONTACT OUR HOTLINE:
0844 800 6503

AUDIOLINE GmbH
Neuss
Internet: www.audioline.de - E-mail: info@audioline.de

Version 1.0 -08.10.2009